




# Cross section

Not to scale

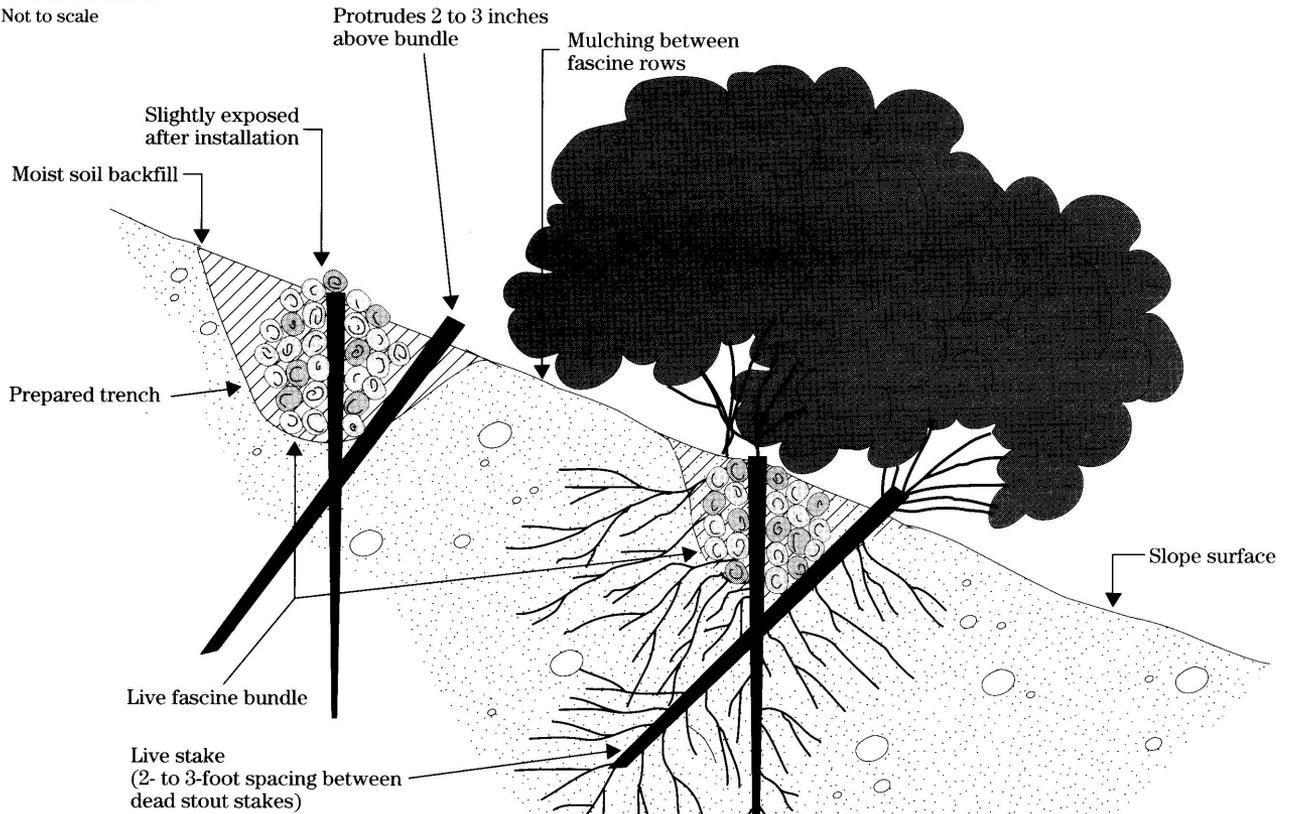

Note:  
Rooted/leafed condition of the living plant material is not representative of the time of installation.

A dead stout stake



Live fascine installation guidelines

Slope	Slope distance between stakes (ft)	Maximum slope length (ft)
1:1 to 1.5:1	3-4	15
1.5:1 to 2:1	4-5	20
2:1 to 2.5:1	5-6	30
2.5:1 to 3:1	6-8	40
3.5:1 to 4:1	8-9	50
4.5:1 to 5:1	9-10	60

Front View of Fascine Bundle

Live branches (stagger throughout bundle)

