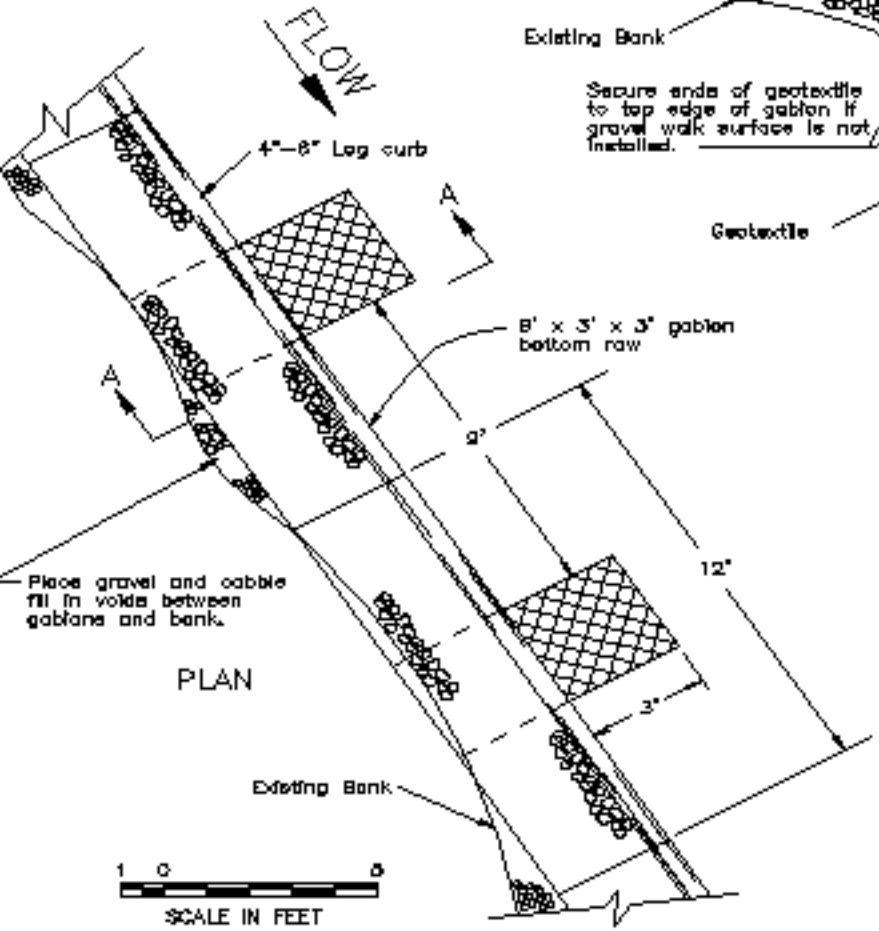

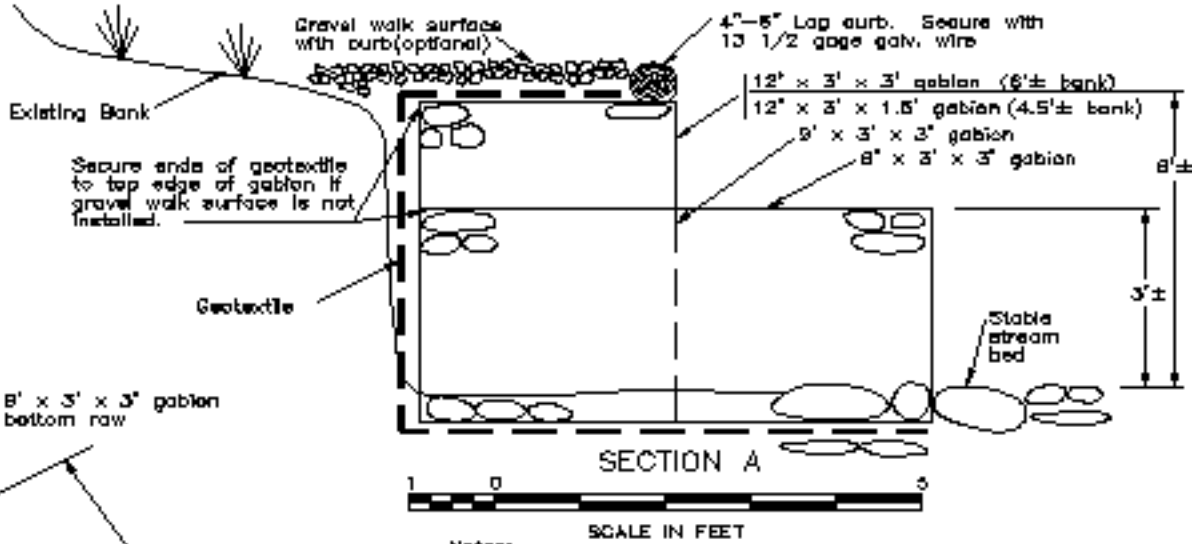

Notes:

1. Remove loose material to provide a firm foundation for gabion baskets.
2. Place geotextile on bank to prevent loss of fine grained soils into gabions. Secure ends.
3. Fill voids between bank and baskets with gravel and cobbles.
4. Place gravel fill between log curb and bank for walkway.
5. Gabions to begin and end at stable bank points. Provide loose rock transition if necessary.
6. Install only bottom row of gabions for low bank(3'±)
7. Gravel walkway surface with curb is optional. Install where heavy use is anticipated.
8. Refer to manufacturer's literature or NRCS standard construction specification for proper construction of gabion blankets.

STREAMBANK PROTECTION	
GABION SKIPTOOTH PATTERN	
3'–8' Bank	optional gravel walk surface